




SUPER ANCHOR SAFETY®


SRL-UH Preliminary Field Test Instructions **05-12-2020** No.1215 SRL Universal Holder+SRL-RMH No.1220 Roof Mount Plate

Fig. 1

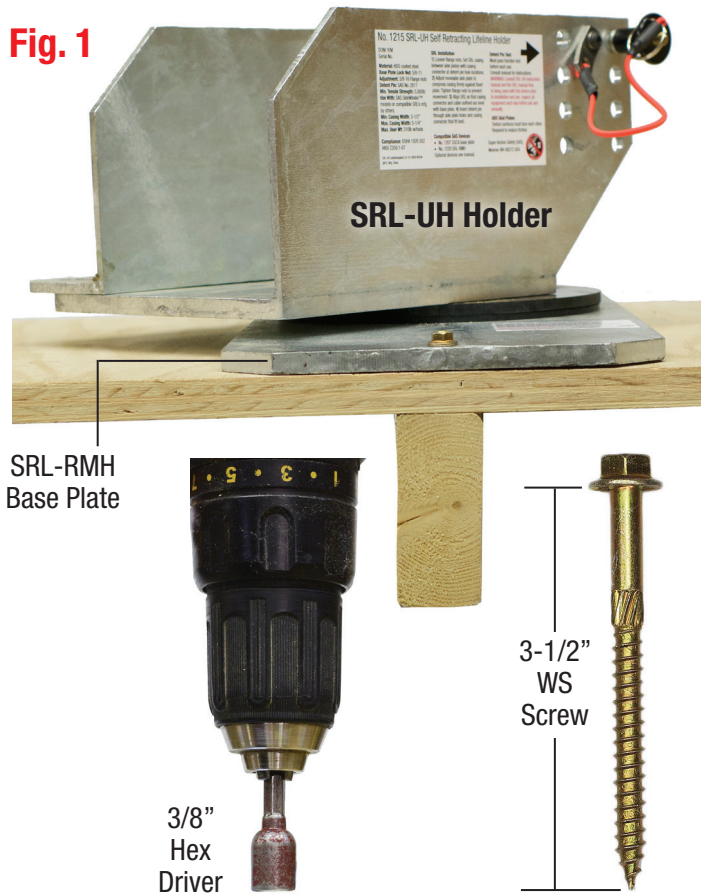

Install RMH base plate onto a fully sheathed 2x top chord.
Center the fastener holes over top chord center as shown at **Fig.1, 2**, and attach with 5ea 3-1/2" WS screws w/3/8" hex driver.

Fig. 2

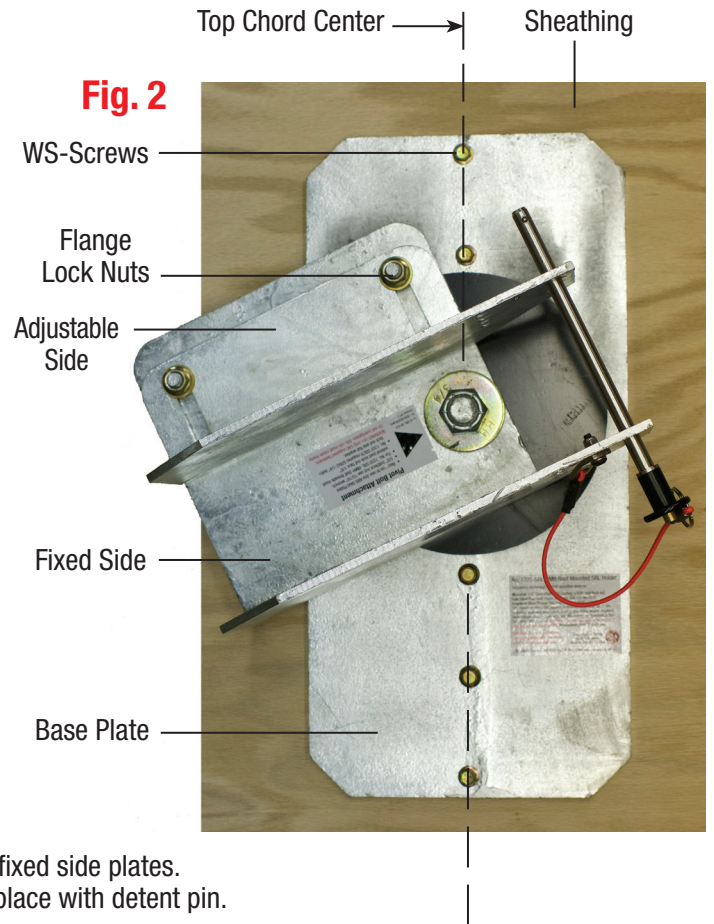

Locking SRL to Holder

Shown at **Figs. 3, 4**, compress SRL casing between adjustable and fixed side plates.
Securely tighten both adjustable side flange lock nuts. Lock SRL in place with detent pin.

Fig. 3 SideWinder SRL

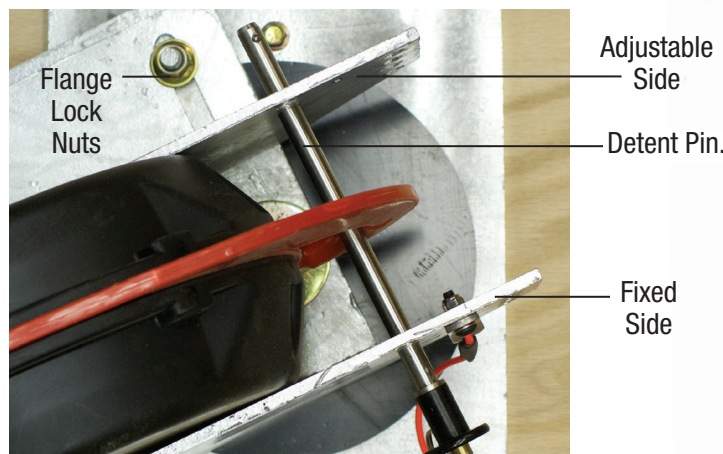


Fig. 4 SideWinder2 SRL

