

Annual and Daily Inspections:

Inspect all harness components prior to each use and inspect annually by a competent person. A written plan for service, maintenance, removal from service and user training should be maintained for each harness. The following inspection points may be used as a guideline to inspect for normal wear, tear and abuse. Record inspections on the "Inspection Label".

Remove equipment from service if any of the following conditions are present:

- ⊗ = Inspection points **ACTION REQUIRED:** ☒=Remove ☑=SAS Factory Repair
- ANSI-CSA and OSHA require that a harness subjected to a free fall must be removed from service immediately and disposed of in a way that prevents further use. ☒
- 1 Has not been inspected annually. ☒
Check inspection label for data entry.
- 2 Warning labels missing or not legible. ☒
- 3 Fall Indicator label/s are missing or warning is visible. ☒ Figs.5,6
- 4 Webbing cut, abraded, damaged by heat or chemicals. ☒
- 5 Webbing stitches cut or loose. ☒ Figs.2,3
- 6 Chest/Leg strap webbing end terminations are missing or stitching is damaged. ☒☑ Fig.3
- 7 Webbing keepers missing or damaged. ☒☑ May be replaced with SAS supplied elastic webbing keepers.
- 8 D-Ring is deformed, cut or evidence of pitting or extreme rusting. ☒
- 9 D-Pad is cut, torn or webbing slots are broken. ☒ Fig.4
- 10 Buckles are missing, cut, deformed or evidence of pitting or rusting. Quick connect buckle won't lock. ☒ Fig.3


Storage/Maintenance

Hang harnesses in dry area. Never store wet. Clean only with mild detergent, soft bristle brush or compressed air. DO NOT use bleach or corrosive cleaning materials.

DO NOT expose webbing to:

- Open flame
- High heat
- Sharp edges
- Electrical hazards
- Cutting tools or grinders
- Acids, chemicals, solvents or petroleum

WARNING!
Storing wet will cause mildew, resulting in damage to webbing and stitching.

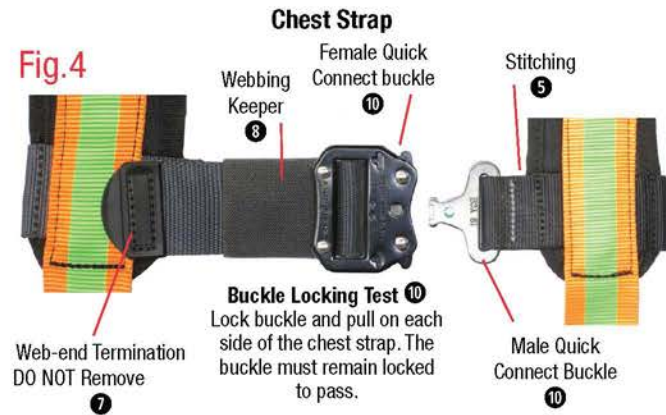

Buckle Locking Test 10
Lock buckle and pull on each side of the chest strap. The buckle must remain locked to pass.



Remove harness from service.



Fig. 5

Side D-Ring Visible.



Fig. 6

Side D-Ring stowed inside elastic keeper.



Primary Label
Date of mfg.

Model No. Specified Here

Material: 100% Polyester
Fall Arrestor "Full Body Harness Model" Modelo
6101 Deluxe™
Person Capacity: 500 lbs (227 kg)
Class / Classe: Full Arrest Full Body Harness
Work Positioning: Posición arrojadora

1 Product I.D.(PID) and Inspection Labels

Instruction Label
English

USER SHALL COMPLY WITH SAFETY STANDARDS WHEN USING THIS EQUIPMENT

Harness Stratch (cm) = 127(50)mm
Max Free Fall (ft) (m) = 5,000(22.54m)
Anchorage Point: 5,000lb(22.54k)
or 2x fall protection lead when safety standards allow
Hardware: Meets ANSI/CSA

WARNING: Read instruction manual. Inspect equipment and perform function tests before each use. Remove defective equipment from service.
FALL INDICATORS: If warning is visible remove from service. **Maintenance:** Keep away from open flame. Do not store wet. **Size Adjustment:** Position D-Ring no lower than 12"(30.5cm) from tip of shoulder, adjust leg, shoulder and chest straps for a snug fit.
WARNING: Improperly adjusted harness may result in serious injury or death if a fall occurs.
Length of Fall: Consult manual to calculate free fall length.
RESCUE: Prolonged suspension may result in death. Rescue immediately!

Use Label C16 English (OSHA 16-2019)
SuperAnchor SAFETY

Instruction Label
Spanish

LOS USUARIOS DEBERÁN ACATAR LAS NORMAS DE SEGURIDAD AL UTILIZAR ESTE EQUIPO!

Estiramiento del arnés: (cm)=127(50)mm
Distancia máxima de caída libre: 6 pies (1.83m)
Punto de anclaje: 5,000 lbs (22.54k) o cuando las normas de seguridad lo permitan, 2 veces la carga a proteger en la caída.
Equipos: cumplen con ANSI / CSA

ADVERTENCIA: Lea el manual de instrucciones. Antes de cada uso, inspeccione el equipo y realice pruebas de funcionamiento. Retire de servicio al equipo está defectuoso.
INDICADORES DE CAÍDAS: Si la etiqueta de advertencia es visible, retire el equipo de servicio. **Mantenimiento:** Manténgalo alejado de flamas abiertas. No guarde mojado. **Ajuste de tamaño:** Posicione el Arco-D no más abajo de 12"(30.5cm) desde la parte superior del hombro, ajuste las correas de las piernas, hombros y pecho para un ajuste cómodo.
ADVERTENCIA: Arneses mal ajustados pueden resultar en heridas serias o muerte en caso de caída.
Distancia de caída: consulte el manual para calcular la distancia de caída libre.
RESCATE: La suspensión prolongada puede ocasionar la muerte. Rescate inmediatamente!

Use Label C26 Spanish (OSHA 16-2019)
SuperAnchor SAFETY

Inspection Label
Imported → GIG

Serial No. →

Super Anchor Safety SAS

Inspection

MM	YY	By	Pass

WARNING TO USER!
You are required to read and use the instruction/specification manual supplied at the time this device was shipped. Improper use and installation can result in serious injury or death.

¡ADVERTENCIA AL USUARIO!
Usted debe leer y utilizar el Manual de Instrucciones / Especificaciones suministrado a la hora de recibir el equipo. El uso y la instalación incorrectos pueden resultar en lesiones graves o la muerte.