



SUPER ANCHOR SAFETY

Wall Mount™ Anchor #1004-1004A

Drill/Bolt Through Specification 5/12/2011

Installation:


Attach by drilling through a double top plate as shown here w/5/16" drill bit. Attach nailing flange with 2ea 12d vinyl sinkers on opposite sides of the attachment bolt with one fastener in the top row and one in the lower row.

Drill bolt hole through framing before nailing.

Field Drilling: Drill a 3/8"d. hole in the center of the anchor leg 1-3/4" from the nailing flange.

Fasteners: 5/16x4.0" Grade 8 bolt, lock nut & flat washer.


2 ea 12d vinyl sinker or 12d duplex

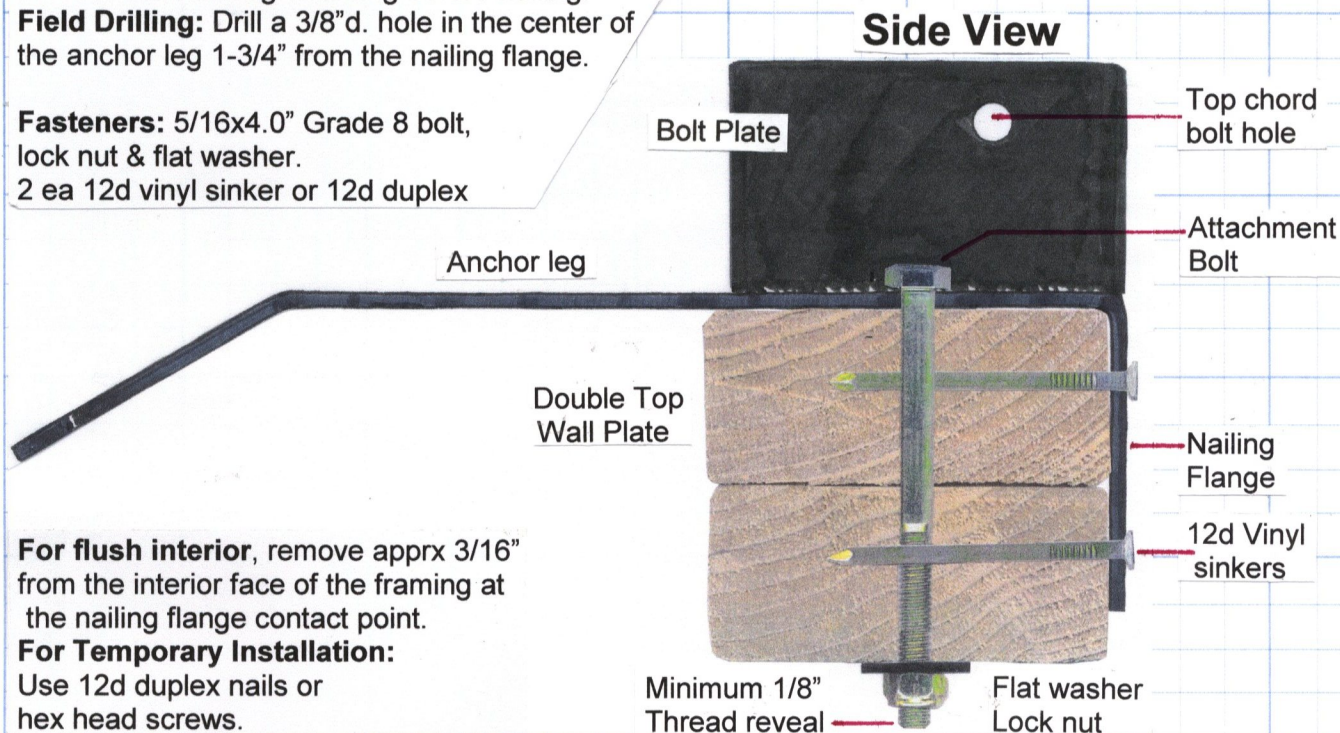

For flush interior, remove apprx 3/16" from the interior face of the framing at the nailing flange contact point.

For Temporary Installation:

Use 12d duplex nails or hex head screws.

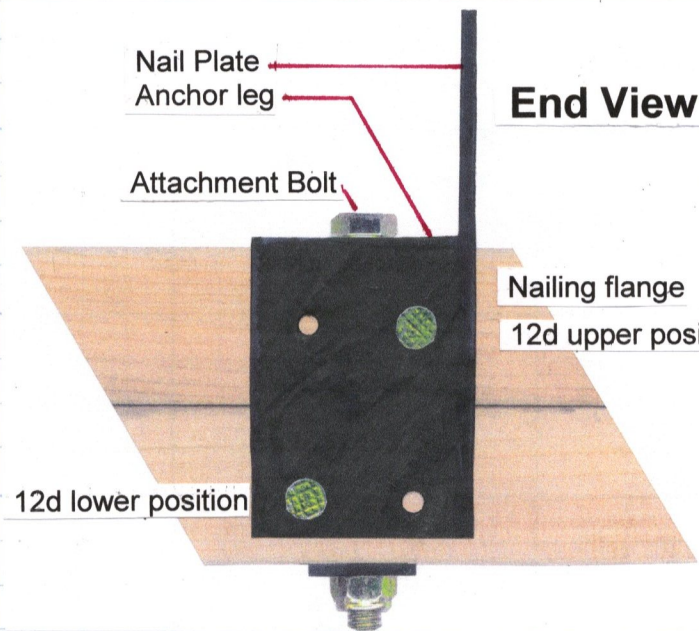

Drilling Template:

